

DE	Originalbetriebsanleitung	Werkbank
EN	Translation of the original instructions	Workbench
FR	Traduction du mode d'emploi d'origine	Établi d'atelier
IT	Traduzione del Manuale d'Uso originale	Banco di lavoro
NL	Vertaling van de originele gebruiksaanwijzing	Werkbank
CZ	Překlad originálního návodu k provozu	Dílenský stůl
SK	Preklad originálneho návodu na prevádzku	Dielenský stôl
HU	Az eredeti használati utasítás fordítása	Munkapad



GW 3/1

 
#40471

GÜDE GmbH & Co. KG
Birkichstrasse 6
74549 Wolpertshausen
Deutschland





LIEFERUMFANG | DELIVERED ITEMS | ARTICLES DÉLIVRÉS | VOLUME DELLA FORNITURA |
LEVERINGSOMVANG | OBJEM DODÁVKY | ROZSAH DODÁVKY | SZÁLLÍTÁSI TERJEDELEM |
OBSEG DOBAVE | OPSEG ISPORUKE | ОБЕМ НА ДОСТАВКАТА | VOLUMUL LIVRĂRII | OPSEG
ISPORUKE

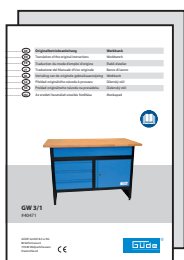

1

14x 

2

17x 

3

34x 

 
4

34x 


5

32x 


6

4x 

 
7

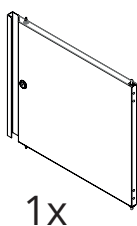


8

 


9

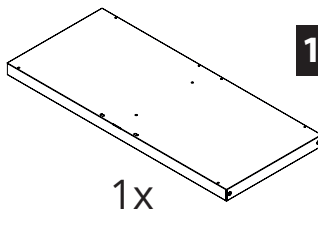 


10

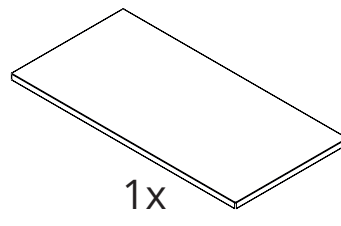 


11

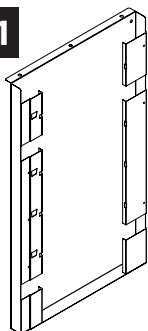 


12

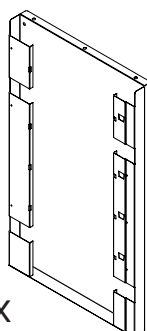 

13

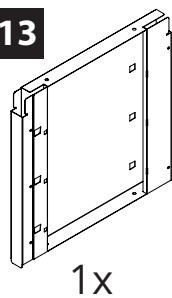 

14

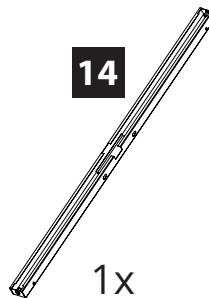 


15




16



 
17

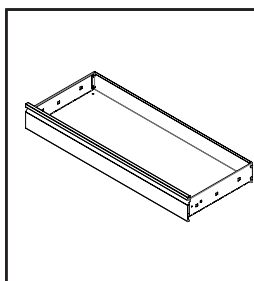



18 1x

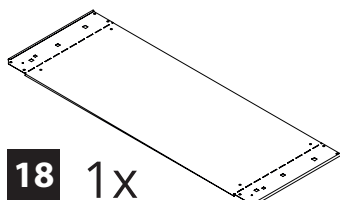 


19 1x

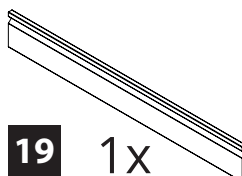 


20 1x

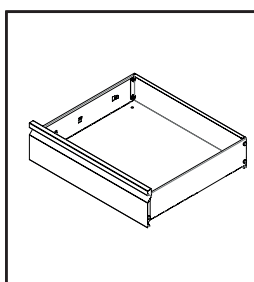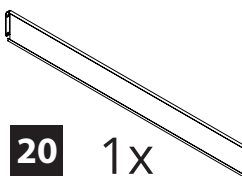  


21 3x


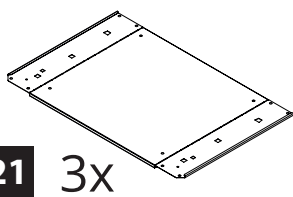 


22 3x

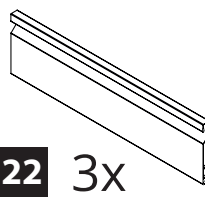 

23 3x

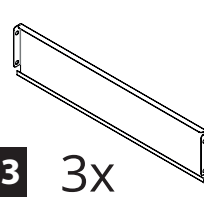 


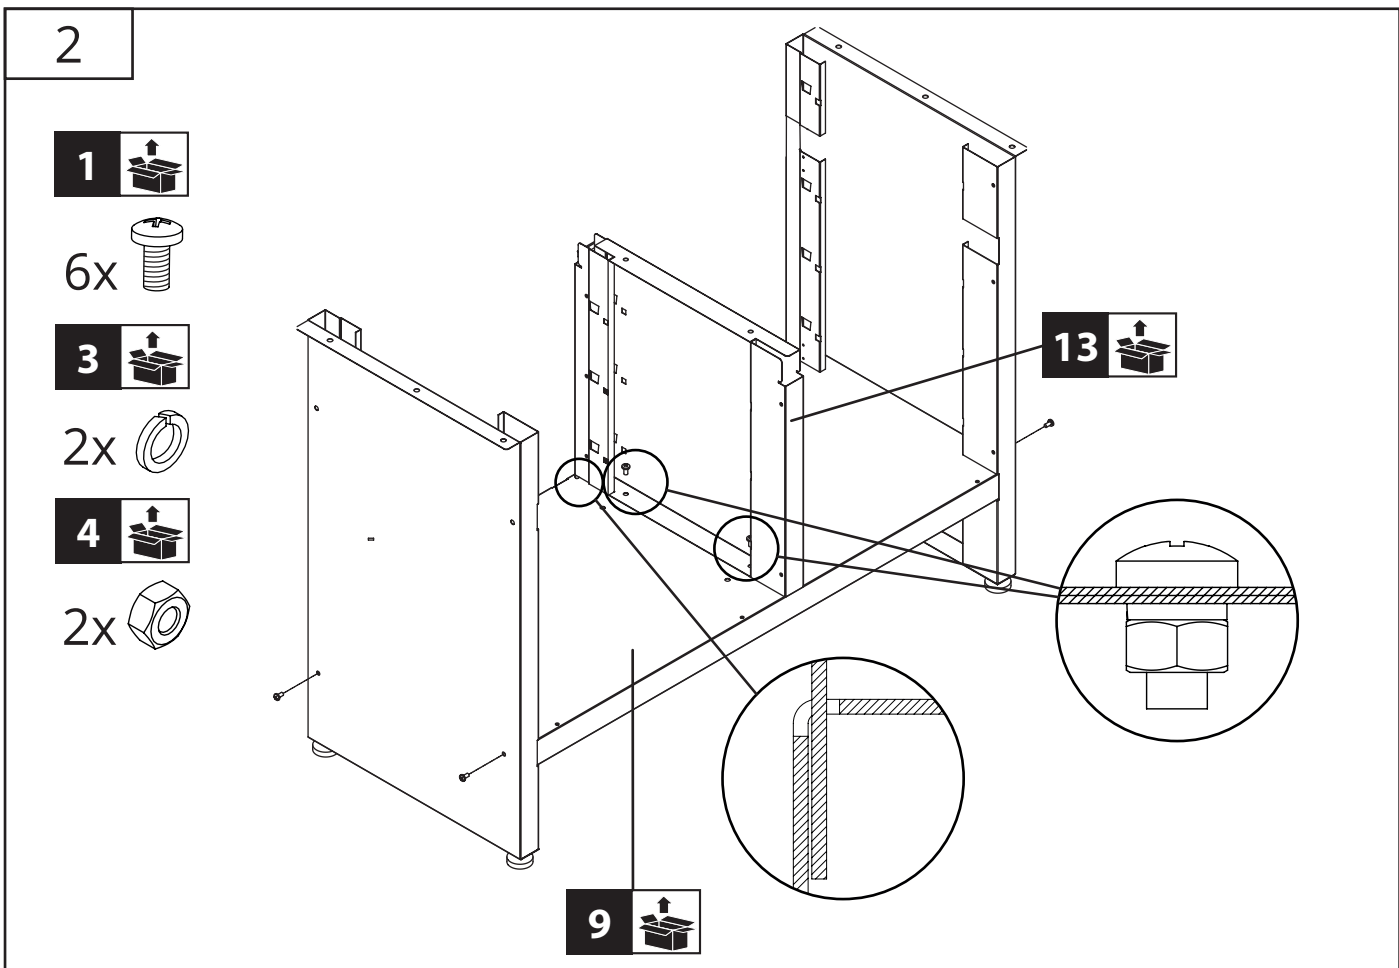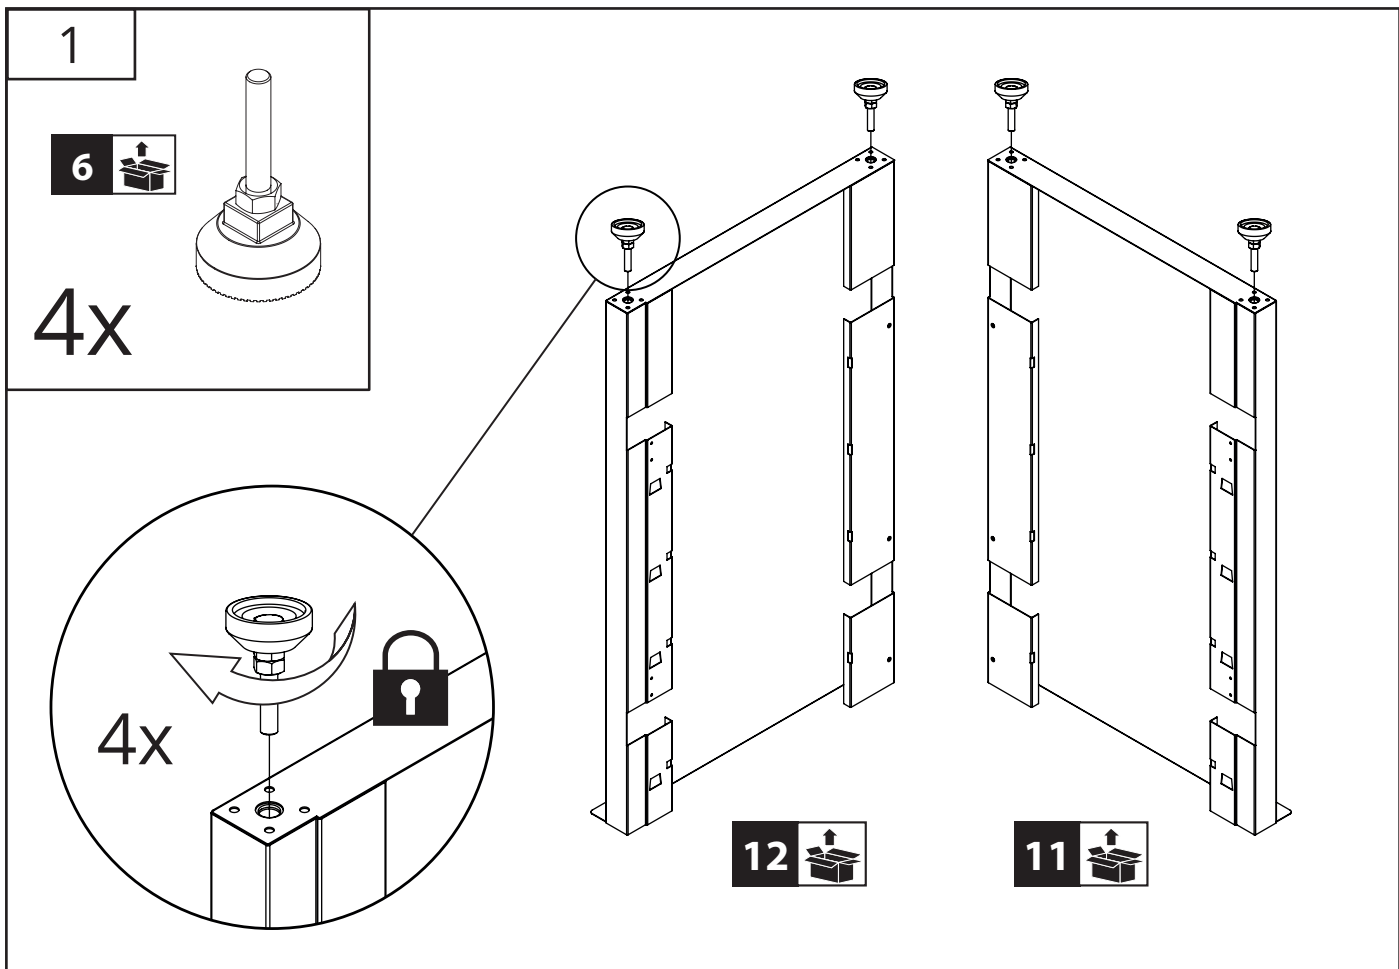  

3



 
2x 

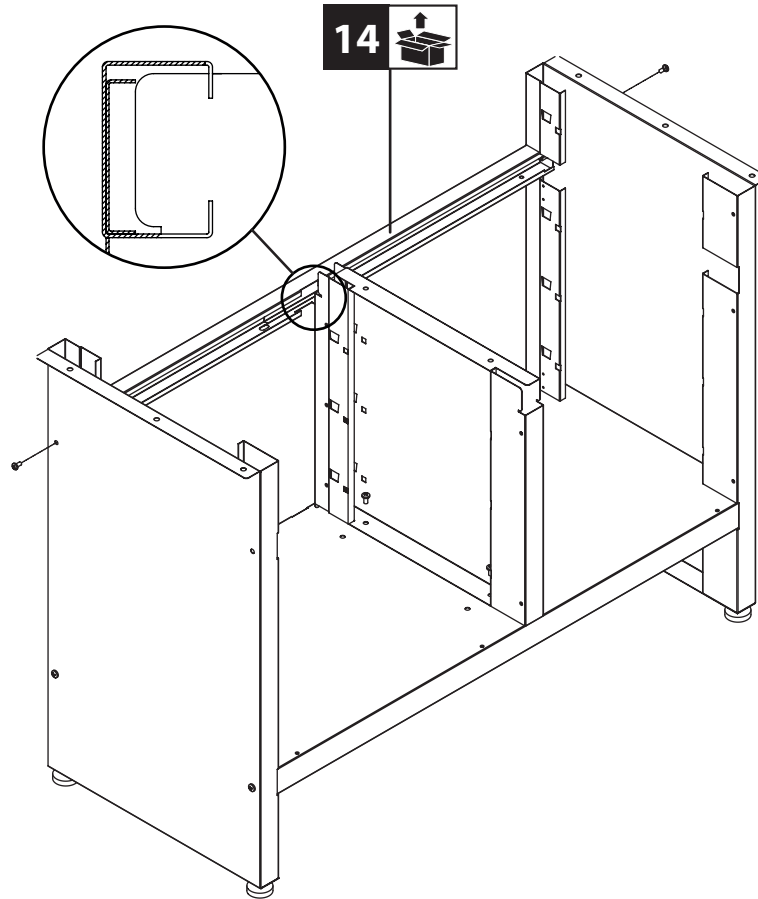

4



 
14x 

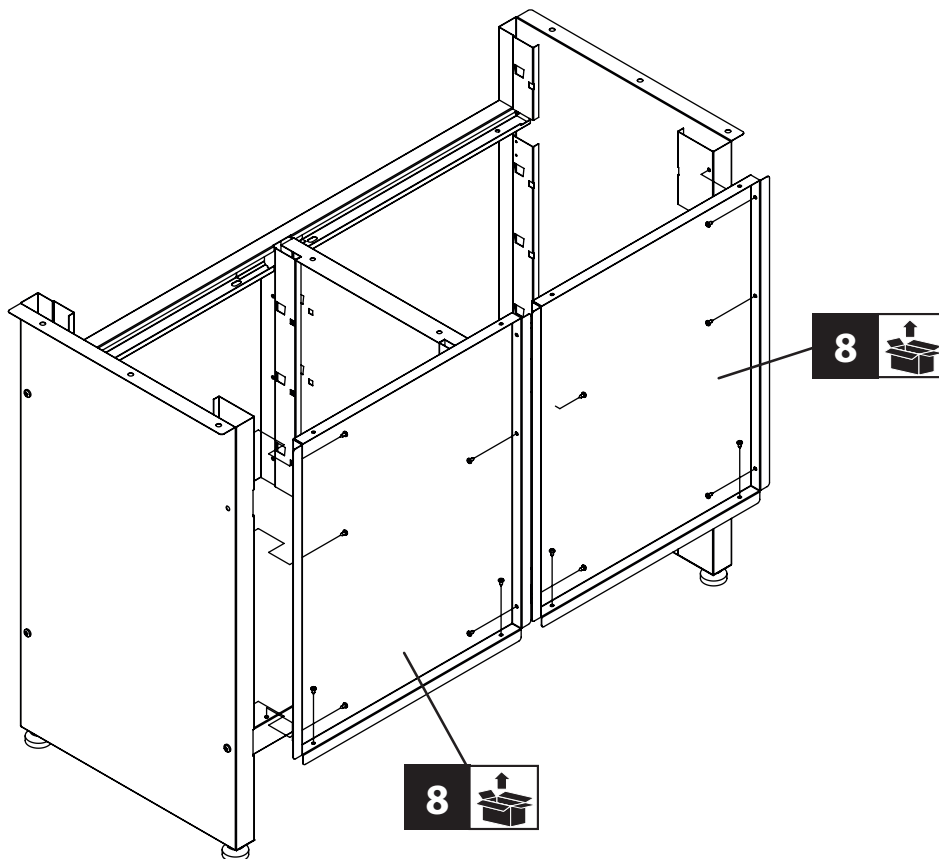

5

16 

 4x


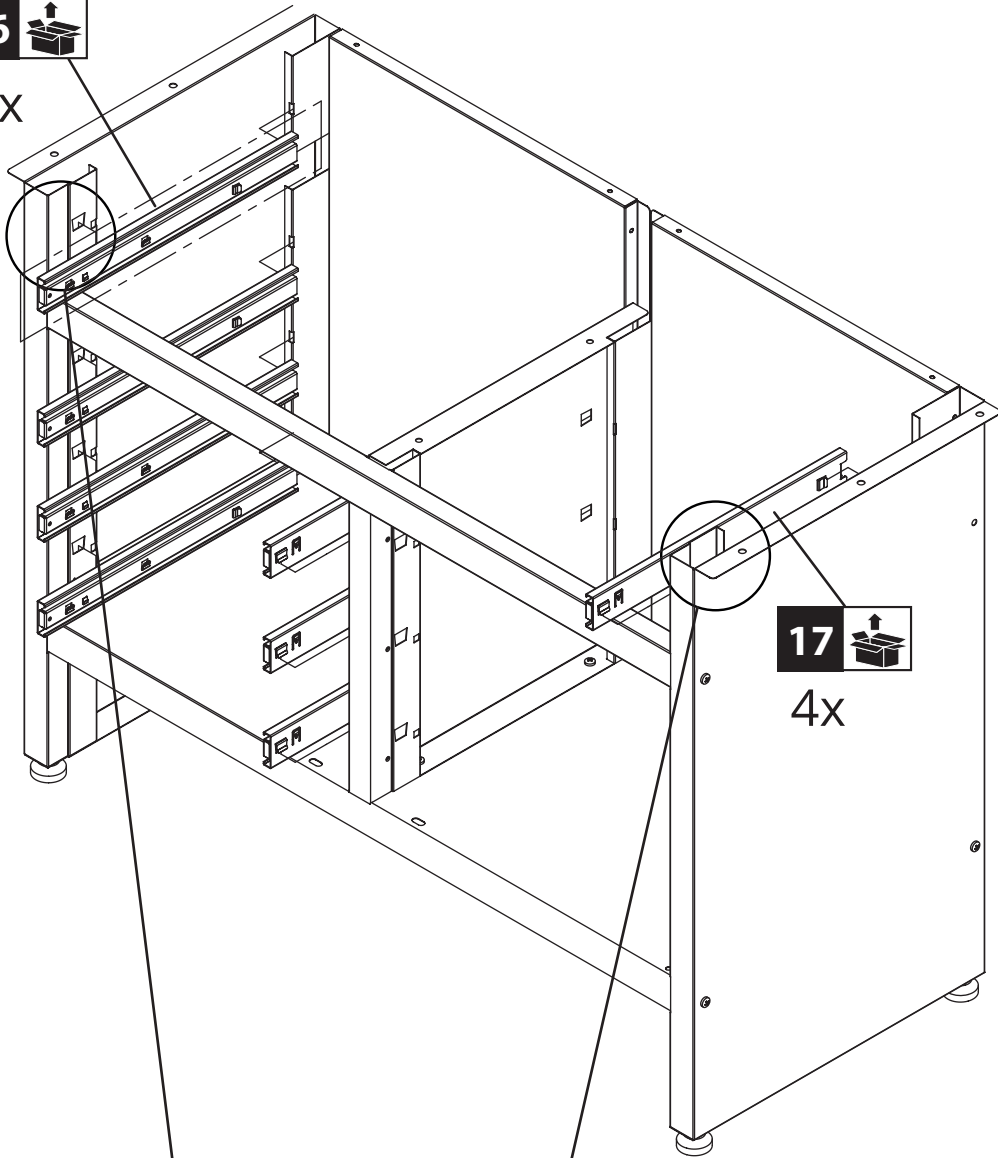


17 

4x



  
6

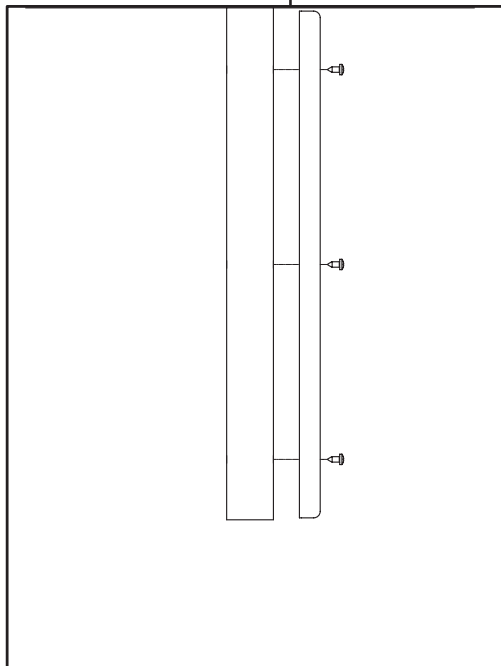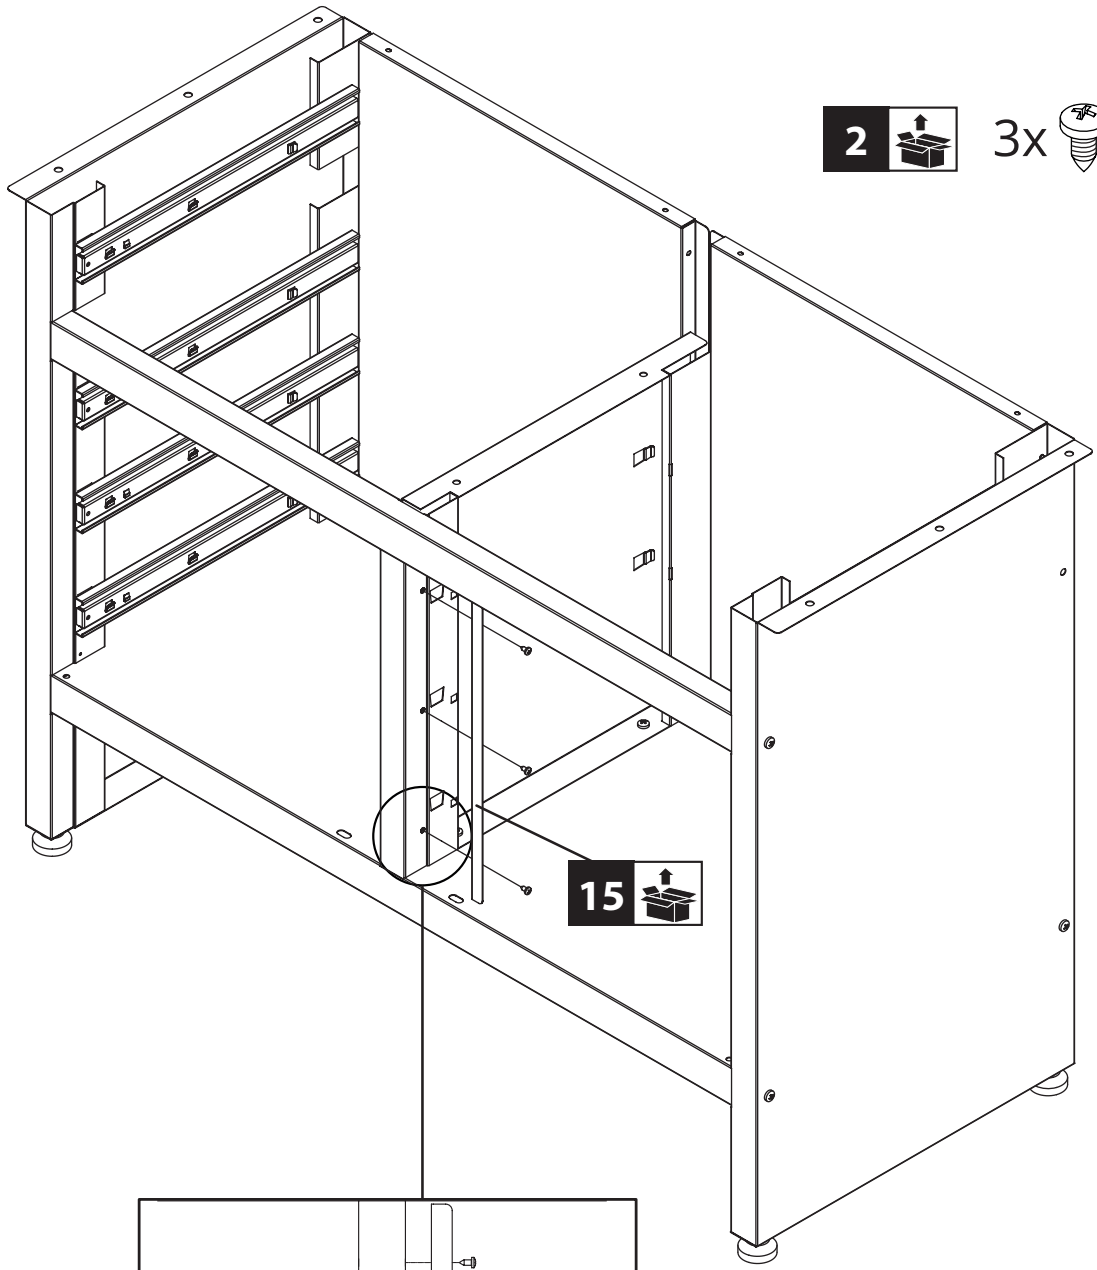


7





 6x 

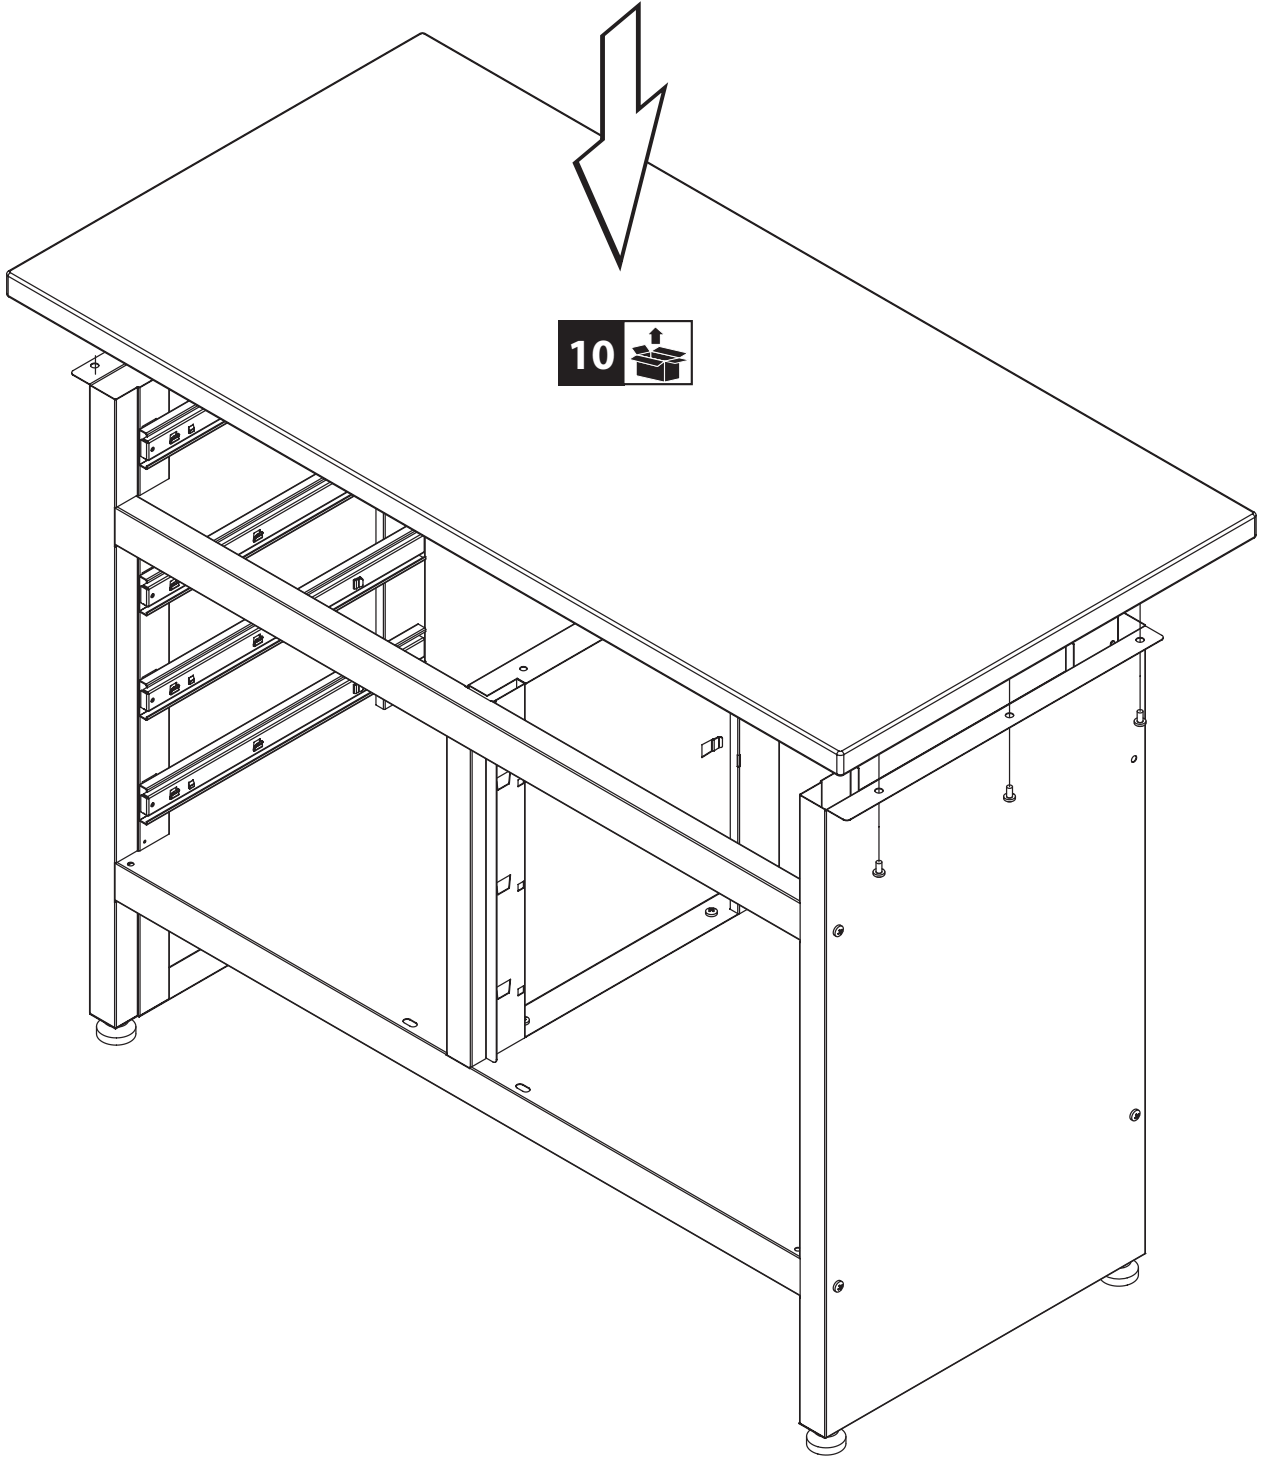

8

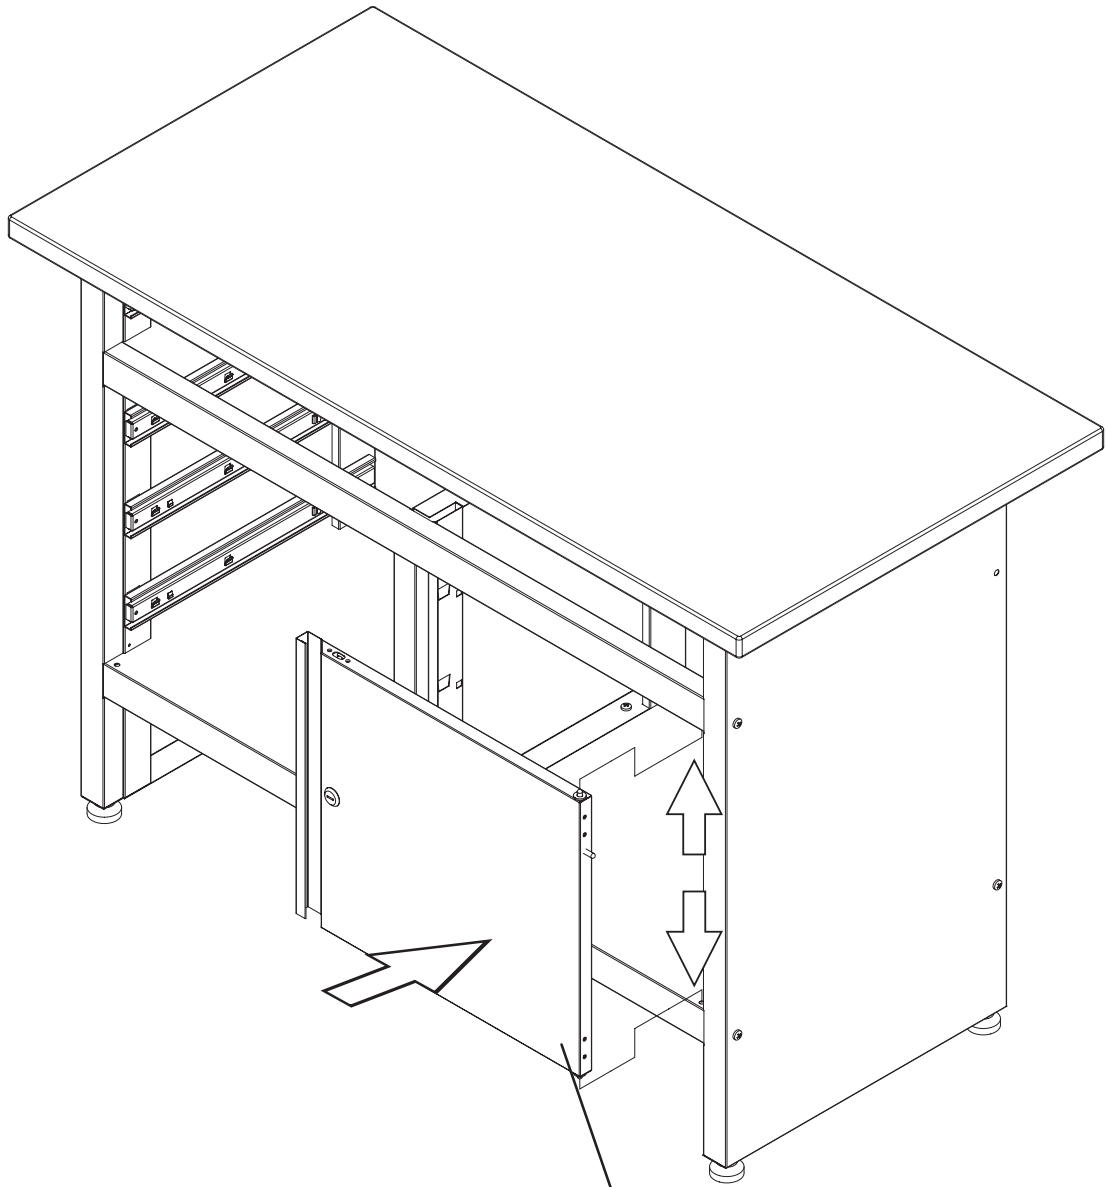 


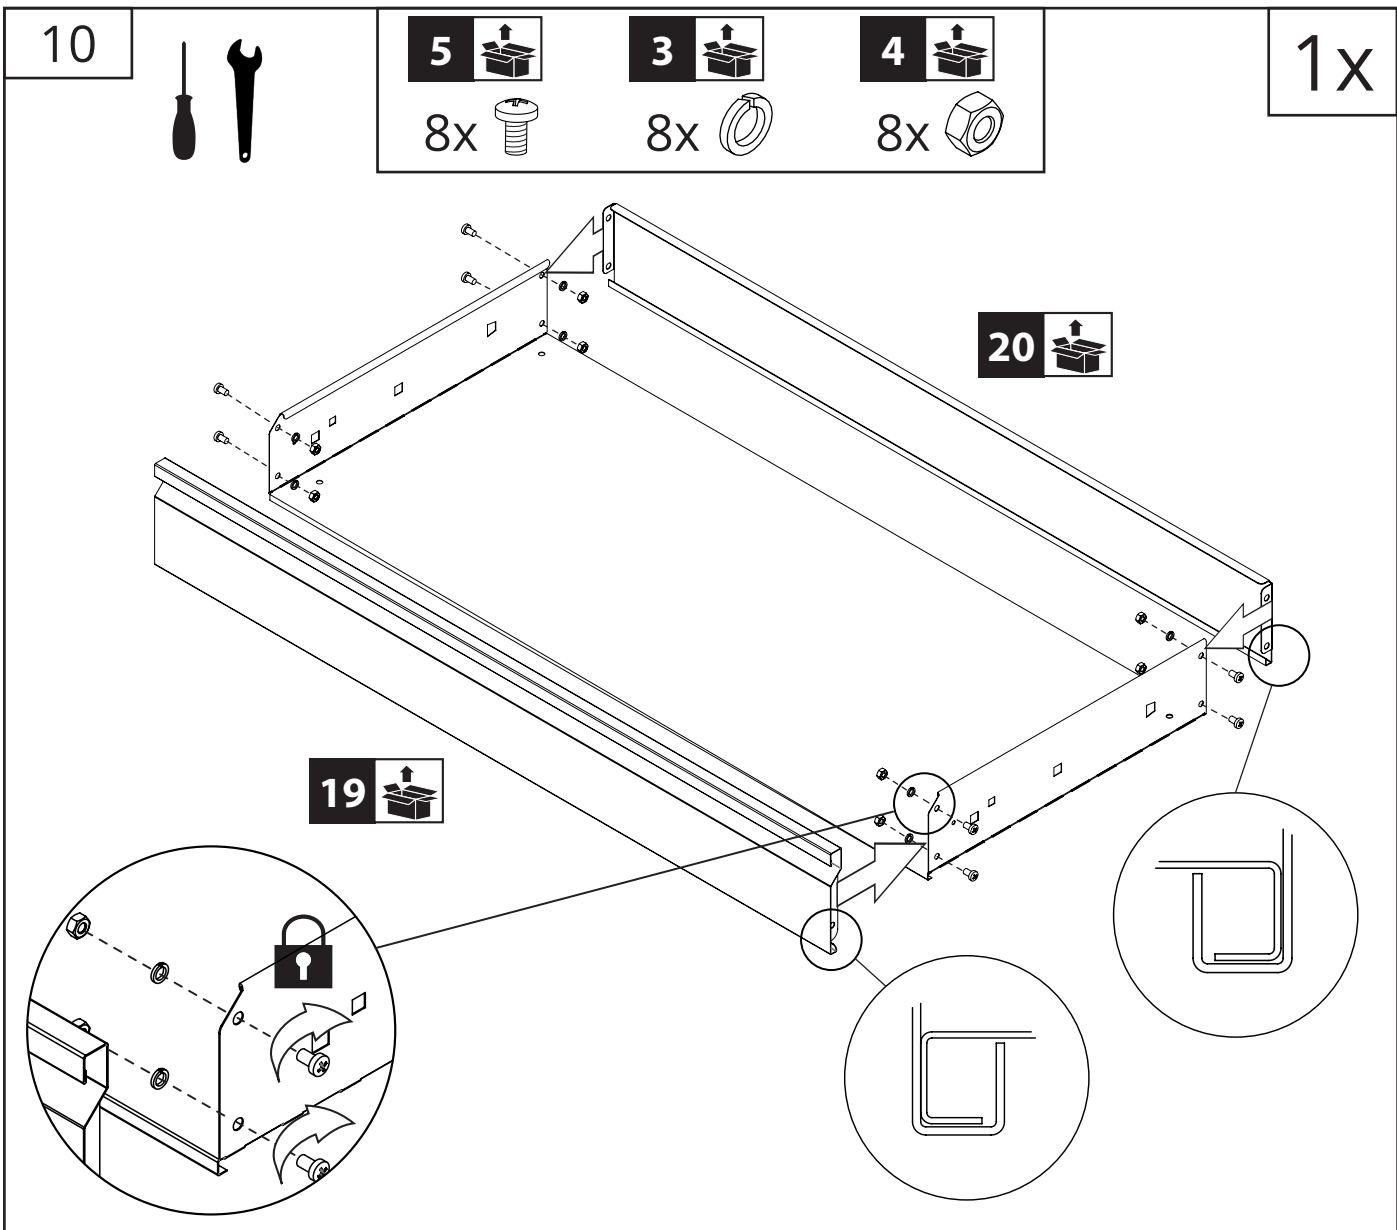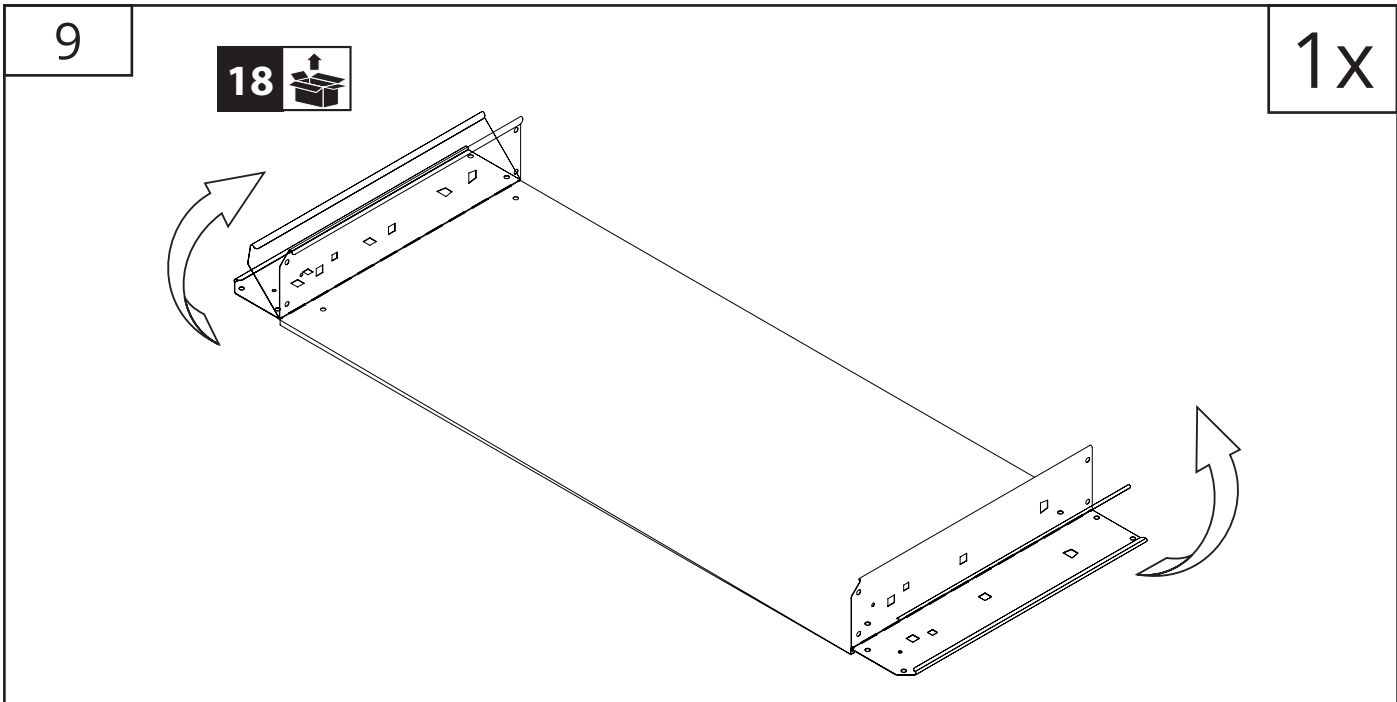  

11



 3x

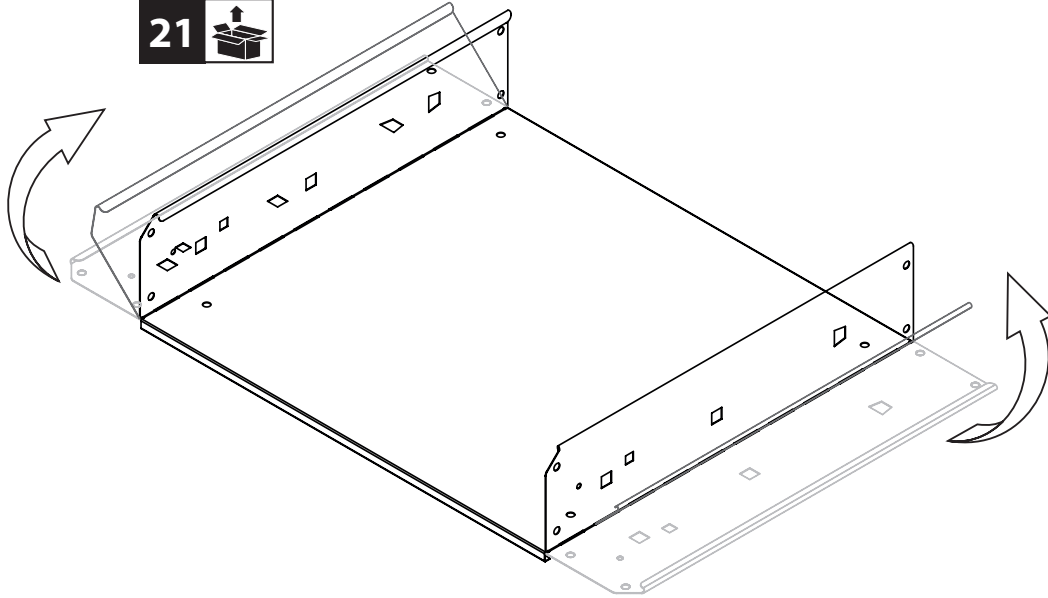

21 





12



5 
8x 

 
 
 
3 
8x 

4 
8x 

3x



23 

22 

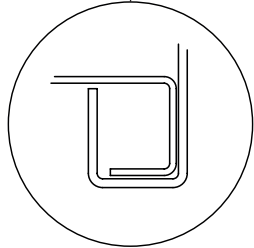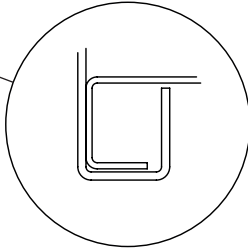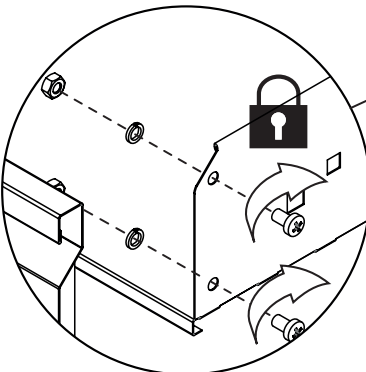



13

  3x

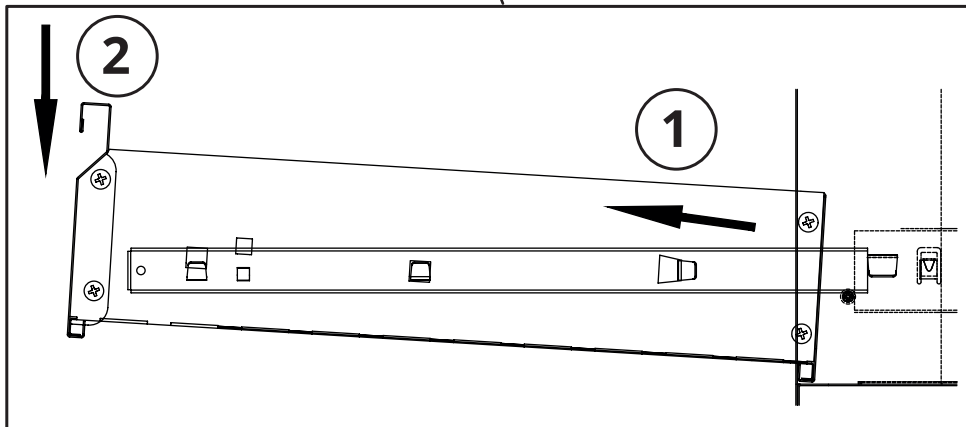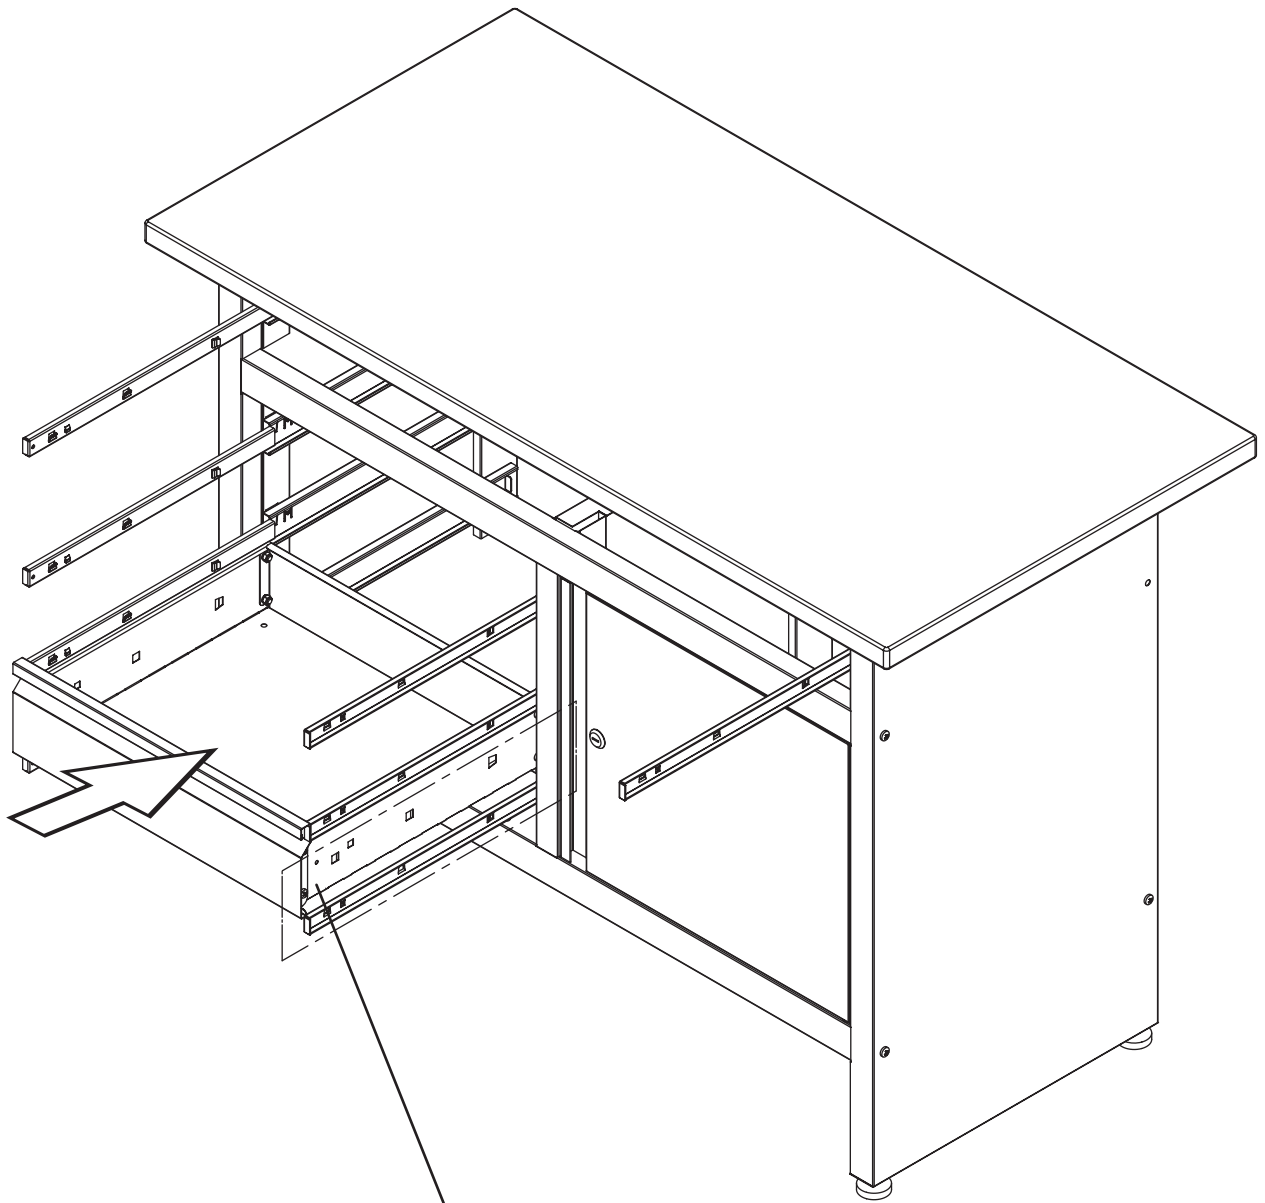


14

  
1x

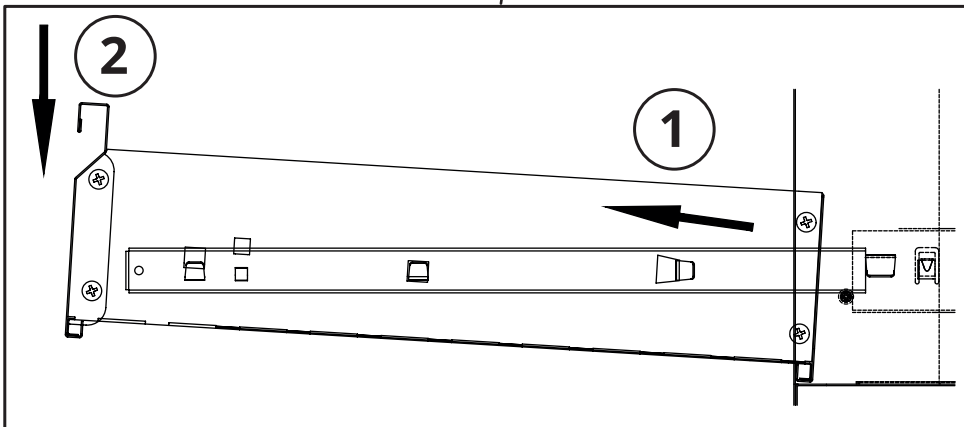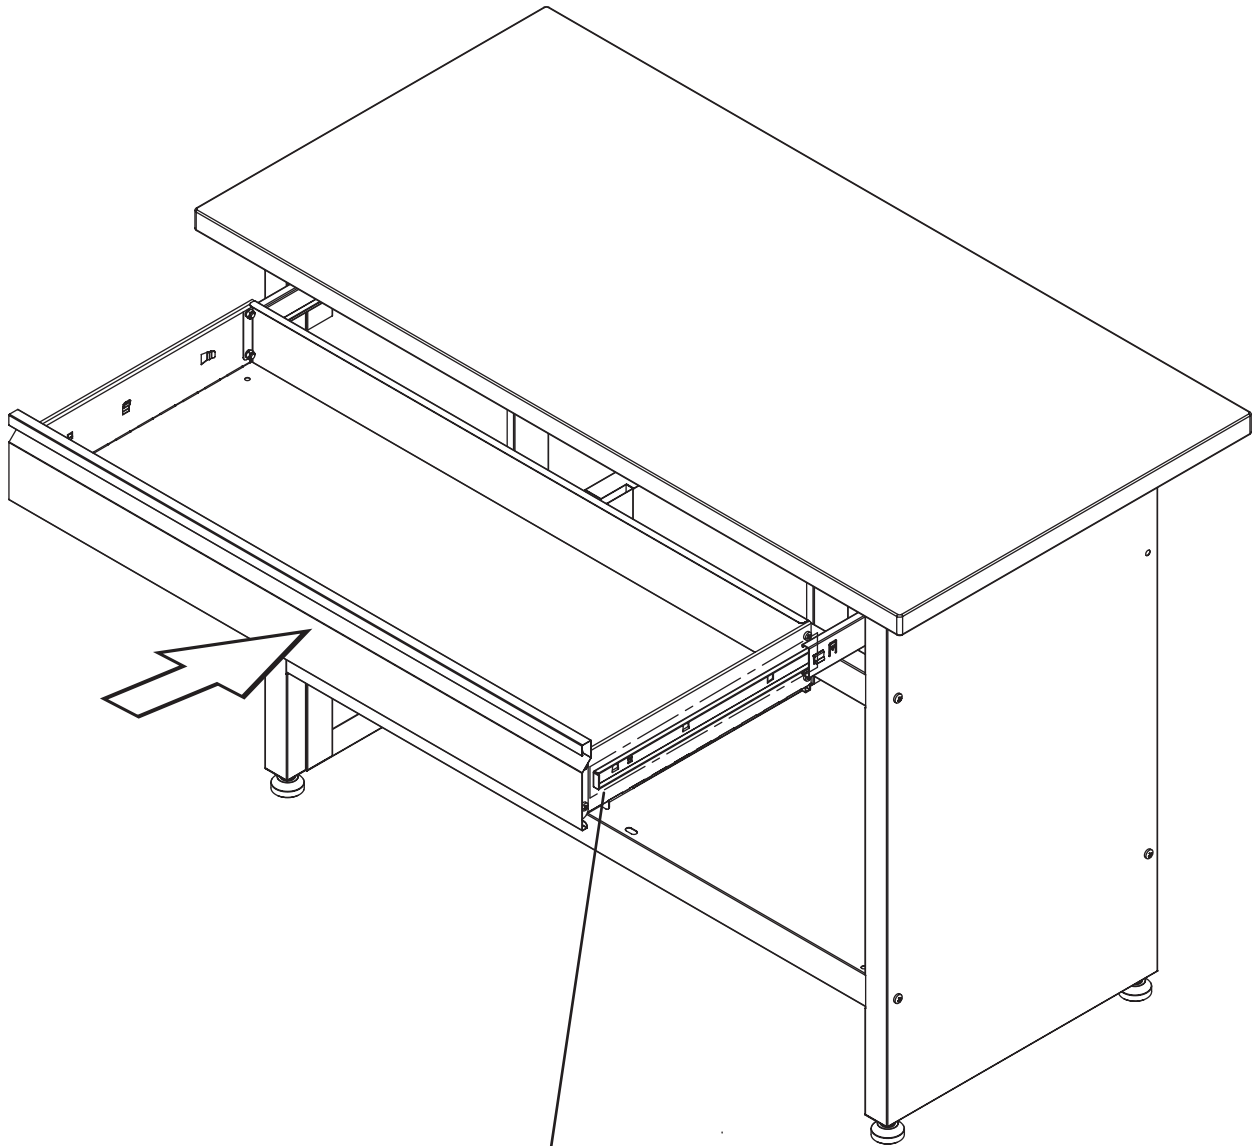

15

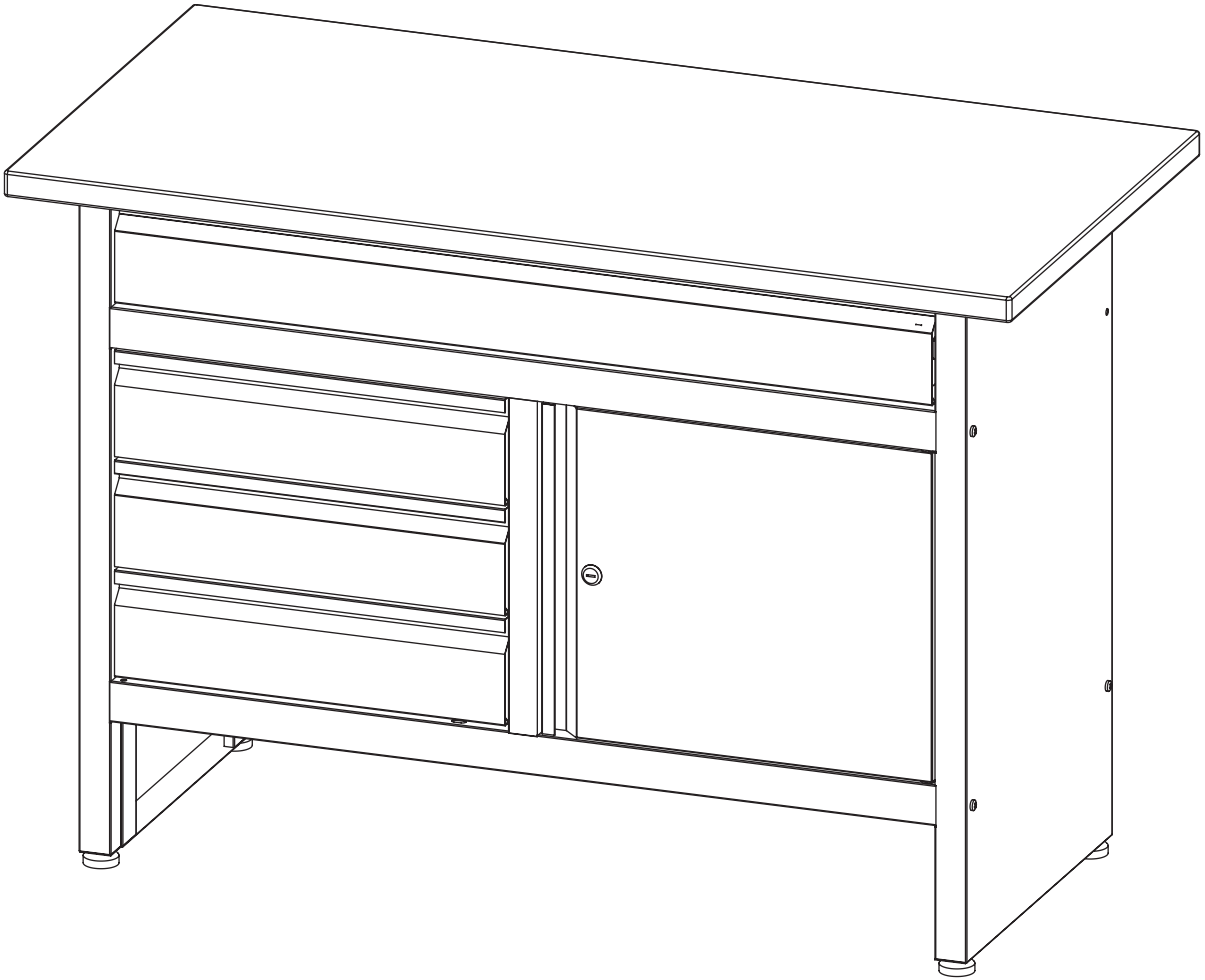 



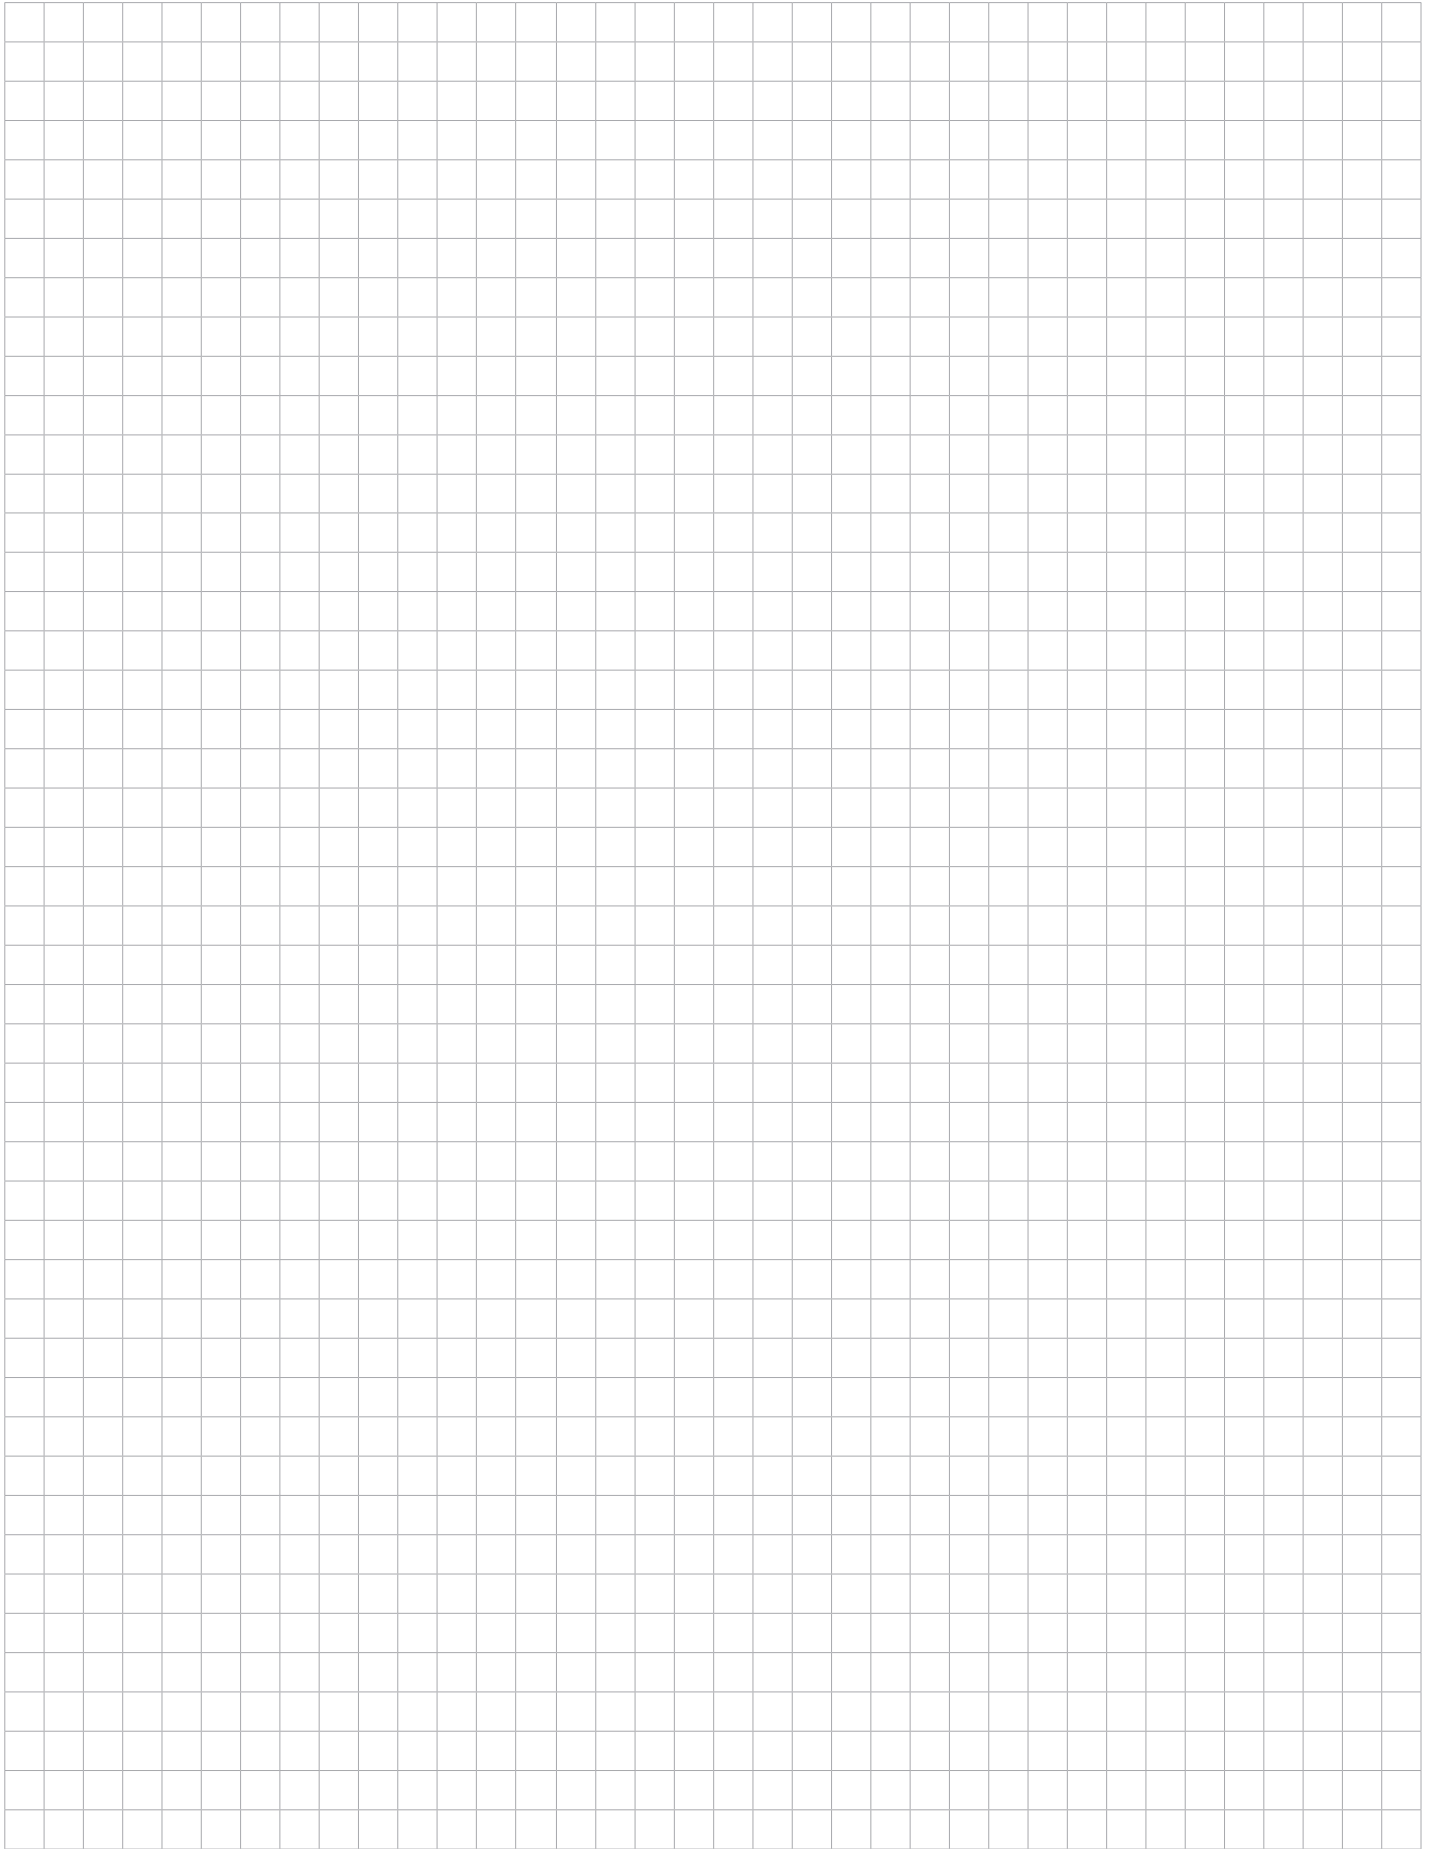 

GÜDE GmbH & Co. KG
Birkichstrasse 6
74549 Wolpertshausen
Deutschland

Tel.: +49-(0)7904/700-0
Fax.: +49-(0)7904/700-250
eMail: info@guede.com

